

divide

Installation guide




divide enables the separation of the KS-BUS with the purpose to:

- separate a part of the system so that any troubles or the sabotage of a peripheral towards the BUS will not affect the entire network but protect the remaining section instead;
- repeat the BUS signal, this will allow to extend it by another 500 m. minimum.

Thanks to its design, there is no difference between the two BUS interfaces that can be connected directly to the control panel. The system can contain multiple divide connected in parallel (up to 32 depending on the control panel model).

DESCRIPTION OF PCBA CONNECTIONS

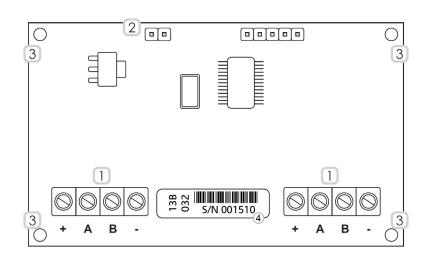

LEGENDE

- 1. Connection BUS to the control panel or peripherals
- 2. Micro-switch connection jumper for tamper detection
- 3. Fixing holes
- 4. Serial Number label

TERMINAL DESCRIPTION					
+ A B -	Connection terminals for lares 4.0 control panel or peripherals.				

Thanks to its extremely compact dimensions, divide can be installed inside the plastic box for DIN rail (KSI7300000.001) or, alternatively, in the plastic box slim version (KSI7302000.010) for housing up to 2 divide.



TECHNICAL DATA

Power Supply: 13.8Vdc Consumption: 20mA Output current: 0.5A

KS-BUS terminal: 2 4-wires (specular in connection) Operating temperature range: from +5° to +40°C

Dimension: 45×75 x16 mm

QUANTITY DATA

lares 4.0 models	wls 96	16	40	40 wls	140 wls	644 wls
Maximum number of expansion modules isolator divide	2	4	12	12	20	32

CERTIFICATIONS

Europe - CE EN50131 Grade 3 - Class II T031:2014









Technical data, appearance, functionality and other product characteristics may change without notice.

