



Join us in taking care of our planet

Thank you for choosing Comelit!


You have purchased a safe, durable and high-quality product.



Help us to save the planet.

Think of the planet before printing this document.

Description

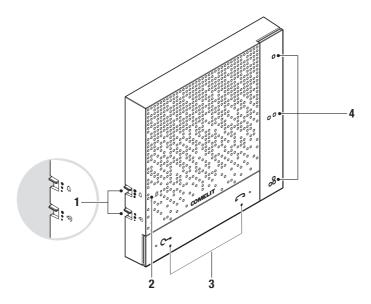

- 1. Two slide selectors, starting from the top:
 - 3-level selector switch for ringtone volume adjustment (high/medium/silent mode)
 - 3-level selector switch for audio volume adjustment (high/medium/low)
- 2. Status LED for "silent mode"
- 3. Two backlit call buttons
- 4. Three programmable buttons

Description of buttons

C	Audio activation		
	▶ Press the key to answer a call or end a call in progress		
C-	Lock-release control		
	 Press the key to activate the corresponding door lock 		
0	Programmable key 1		
	 Press the key to activate the corresponding control 		
00	Programmable key 2		
	 Press the key to activate the corresponding control 		
0	Programmable key 3		
oŏ	▶ Press the key to activate the corresponding control		

Indicator LED

Buttons with backlit icons help the user to understand the event taking place, for example: flashing for an incoming call or a steady green light when the "Automatic answer" function is enabled.

For a more detailed understanding, please refer to the legend below:

C	Green LED	Flashing: incoming call
		Steady: the "Automatic answer" function is enabled
	Red LED	Steady: in communication during a call
c-	White LED	Flashing slowly: indicates that the corresponding door lock has been opened
		Steady: the "Automatic lock-release" function is enabled
		Continuous flashing: incoming call or call in progress
Ą	Red LED	Steady: indicates that "Silent mode" has been activated



CERTIFIED





