

volo volo-in

Proximity readers

Installation guide





INTRODUCTION

volo and **volo-in** are proximity readers that allow the user to manage the arming /disarming of the Ksenia Security System and more in general the activation/deactivation of different scenarios programmed in terms of Home Integration, by means of enabled mini-Tags (KSI7600000.000). They are connected to the 4-wires KS-BUS and programmed directly from the Control Panel.

volo can be installed both outdoor (its plastic enclosure and the PCB protection treatment of full immersion in epoxy resin allows the outdoor installation without additional protection) and indoor, directly onto the wall (in vertical) or screwed onto the box DIN 503 (with an optional frame - KSI220001.3X0). From a component point of view, volo has been developed with an innovative tamper protection (against wall removal and opening): an accelerometer.

volo-in is an indoor proximity reader that can be installed on any type of switch plate normally designed for light switches, it uses the slot of the standard adapter normally used for the RJ45 socket.

Both the devices are provided with 5 colors LED and each of them can be associated to a customizable scenario; beside the light signal, **volo-in** is also provided with acoustic signals (a different tone each color) to the performed operations, to compensate for a particular lighting conditions (e.g. over-exposure) as well as to meet the needs of visually impaired users.

TECHNICAL DATA

Supply voltage: 13.8Vccvolo consumption: 40mAvolo-in consumption: 10mA

Proximity reader technology RFID13.56 MHz


volo dimensions: 127 x 43 x 17 mm
volo-in dimensions: 46 x 19 x 44 mm

QUANTITY DATA

lares 4.0 models	wls 96	16	40	40 wls	140 wls	644 wls
Maximum number of user interfaces (volo, volo-in, ergo, ergo S and ergo M)	3	6	24	24	40	64



PARTS IDENTIFICATIONS

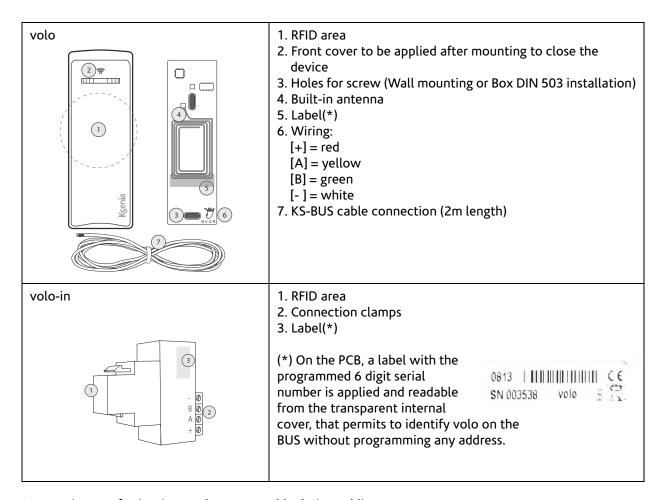

Notes: - insert a ferrite ring on the power cable during cabling.

- volo-in must be protected from tampering through a tamper inside the cover plate.

INSTALLATION PRECAUTIONS (volo only)

Considering the type of the device, when installed on metal surfaces or supports it is advisable the use of the frame (KSI220001.3X0) and the adoption of a teflon screw (or other insulating material) to be placed on the top (near the antenna). Also consider the stiffness and lack of vibration of the support in order to avoid false reports of tamper events.

OPERATING MODE

volo and volo-in devices are equipped with a multicolor LED: Red, Green, Blue, Yellow and White. Each color can be associated with a preprogrammed scenario.



Approaching a valid Tag to the Proxy Reader, the LED will switch on the color associated to the possible scenario, proposing automatically the most probable choice at first. To activate the desired scenario, take the Tag away when the LED is ON of the color related to that scenario: as acknowledge the LED will remain ON with the same color for other 3 seconds. In the idle state the LED color is red if all partitions are enabled, green (or OFF in case of colorblind option enabled) if all partitions are off, blue in other cases. After a full cycle on programmed colors (scenarios), the LED remains off for 3 seconds, if the Tag is taken away in this condition no scenario will be activated. If alarm or tamper conditions are present, the LED blinks yellow every 3 seconds.

ACOUSTIC SIGNALISATION (volo-in only)

bip: High Pitcher Tone

bop: Low Tone

ACTION	BUZZER		
GREEN Scenario	1 bip		
RED Scenario	1 bop		
WHITE Scenario	1 bip + 1bip		
BLUE Scenario	1 bop + 1 bop		
YELLOW Scenario	1 bip + 1 bop		
Confirmation	3 bip		
No Operation	1 bop long		

Technical specifications, appearance, functionality and other product characteristics may change without notice.

CERTIFICATIONS

volo	volo-in					
Europe - CE, RoHS EN50131 Grade 3 - Class II T031:2014 SSF 1014 Larmklass 3	Europe - CE, RoHS EN50131 Grade 3 - Class II T031:2017	(A) (III)	3930/	RoHS 2002/94KC	C€	

